

 


# NEBULA PRO WIRELESS CONTROLLER

## USER MANUAL

### FEATURES

- Bluetooth® Wireless
- Customizable RGB LEDs
- Built-in Dual Motors
- 4 x Programmable Back Buttons
- Turbo Function
- Soft-touch Rubber Finish
- Six-axis Sensor (Gyro)
- Battery Capacity: 550mAh
- Type-C Charging Cable, 2m

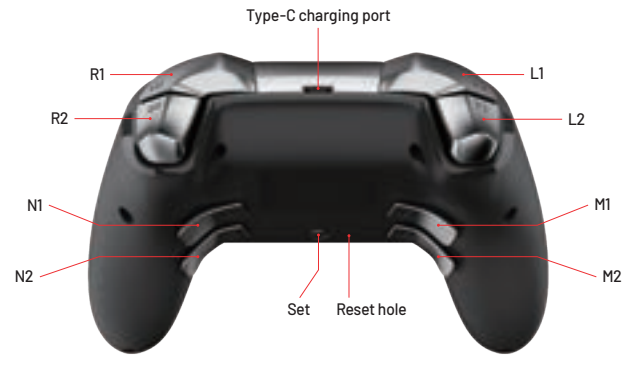

### PAIRING STEPS

#### For SWITCH™ / SWITCH™ OLED

##### Wireless

- 1 On Home screen of your Switch console, please select [Controllers] > [Change Grip/Order].
- 2 Press Home button for 3 seconds to activate the controller, when 4 LEDs flash, controller is in connecting mode.
- 3 Please follow the instructions on the screen of your Switch console, once the controller and console connected successfully, the player LED stays on.

##### Wired

- 1 On Home screen of your Switch console, select [System Settings] > [Controllers and Sensors] > [Pro Controller Wired Connection] enable this feature.
- 2 Plug the USB cable to the Nintendo Switch dock, the controller will automatically connect to the Switch.
- 3 Once the controller and your console connected successfully, the player LED stays on.

#### For PC / Mobile

##### Wireless

- 1 While controller powered OFF, press the Home button, release when 4 LEDs flash and the controller is now in pairing mode. When the "Pro Controller" appears in the list of Bluetooth devices, select it.
- 2 Once connected to the device, the LED will stop flash and the LED1 stays on.

\*Only compatible with the devices with BT function.

##### Wired

- 1 Turn the controller off, connect it with your PC via the USB cable provided.
- 2 Once connected, the default mode is X-input, LED2 stays on.

#### For D-input mode

Press and hold - (Select) and + (Start) buttons for 3-5 seconds, LED3 lights up.

X-INPUT: XBOX 360 Controller for Windows

D-INPUT: Nebula Controller

### RECONNECTING

If the controller has been paired with the Switch console or with a mobile phone, you won't need to re-pair. It will automatically reconnect.

### FIRMWARE UPDATE

 
- Firmware update instruction available on [www.dragonshock.com](http://www.dragonshock.com)
- Find and select Nebula Controller
- Click 'Download' and follow the instructions on the screen

### MACRO PROGRAMMING

**Support buttons:** ABXY, L1/L2, R1/R2, L3/R3, D-pad

#### Setup

- 1 Press Set button for 3 seconds.

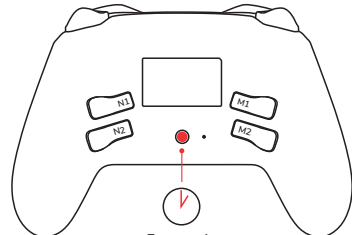


- 2 LED4 lights up.



- 3 Press any button or combined buttons you would like programmed.



 - 4 Press the back button you would like to programme a function.

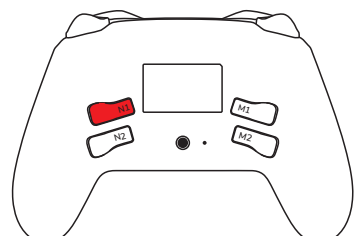


- 5 The controller will vibrate once setup successfully.



#### Clear

 
- 1 Press Set button for 3 seconds.

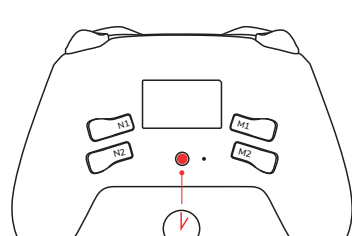

- 2 LED4 lights up.



 - 3 Press the programmed back button.

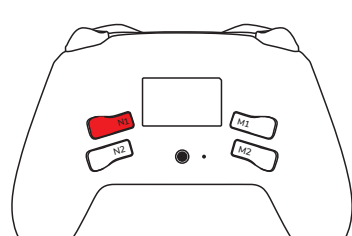

**Note:** The programming buttons has memory function.

### TURBO

**Support buttons:** ABXY, L1/L2, R1/R2, D-pad

 
**Setup:** Example, set L1 as turbo.

**Shoot:** Press and hold 'T + L1'.

**Auto shoot:** Press and hold 'T + L1', 2nd time.

**Clear turbo:** Press and hold 'T + L1', 3rd time.


**Clear all turbo functions:** Press and hold 'T + -' for 1 second

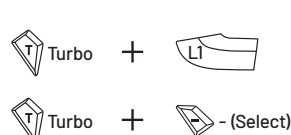

### VIBRATION ADJUSTMENT


#### High

 Press and hold the Turbo button, and press L3 towards up direction.



#### Low

 
Press and hold the Turbo button, and press L3 towards down direction.



### SPEED ADJUSTMENT


#### High

 Press and hold the Turbo button, and press R3 towards up direction.



#### Low

 Press and hold the Turbo button, and press R3 towards down direction.



### LED INDICATOR

#### Players

4 LEDs that represent the players.

#### Charging

When charging - The 4 LEDs will flash slowly.

Once fully charged - The LEDs stay on.

\*When playing through wired mode, the controller will be charged by the computer or console.

### RGB LEDS CONTROL

- 1 Press the Set button to switch through different colour settings: RGB MIX WAVE, BLUE, RED, GREEN, PINK, ORANGE, CYAN, PURPLE, OFF.
- 2 The controller memorises the last LED settings.

### RESET

If you experience the controller dysfunctional, please reset the controller.

Please use a pin, press and hold on the small hole on the back of the controller for 3-5 seconds.

### SPECIFICATION

Type-C Charging cable	2m
Wireless Connection	Bluetooth 2.1+EDR
Bluetooth transmission distance	≤ 8m
Battery type	Li-ion
Battery capacity	550mAh
Charging hour	3h
Play hour	6h-8h

Input power rating	DC5V/1A
Voltage	5V±/-0.2V
Operating temperature	-10℃---60℃
Radio frequency	ISM 2.4G
Frequency band	2402---2480MHz(1MHz)
Maximum radio-frequency	0dbm
Mass	Approx. 194g