


taurus

ALPATEC 

NEW BABEL
NEW BABEL DIGITAL

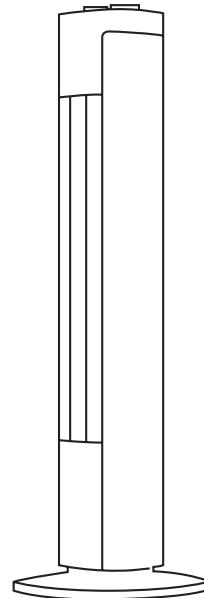

CONSEJOS Y ADVERTENCIAS DE SEGURIDAD

SAFETY ADVICE AND WARNINGS

CONSEILS ET MESURES DE SÉCURITÉ

RATSCHLÄGE UND SICHERHEITSHINWEISE

CONSIGLI E AVVERTENZE PER LA SICUREZZA

CONSELHOS E ADVERTÊNCIAS DE SEGURANÇA

CONSELLS I ADVERTÈNCIES DE SEGURETAT

VEILIGHEIDSADVIEZEN EN WAARSCHUWINGEN

PORADY I OSTRZEŻENIA DOTYCZĄCE BEZPIECZEŃSTWA

RECOMANDĂRI ȘI AVERTIZĂRI PRIVIND SIGURANȚA

СЪВЕТИ И ПРЕДУПРЕЖДЕНИЯ ЗА БЕЗОПАСНОСТ

ΟΔΗΓΙΕΣ ΚΑΙ ΠΡΟΕΙΔΟΠΟΙΗΣΕΙΣ ΑΣΦΑΛΕΙΑΣ

ИНСТРУКЦИЯ ПО ТЕХНИКЕ БЕЗОПАСНОСТИ

نصائح وتحذيرات السلامة

English

Dear customer,

Many thanks for choosing to purchase a TAURUS ALPATEC brand product.

Thanks to its technology, design and operation and the fact that it exceeds the strictest quality standards, a fully satisfactory use and long product life can be assured.

- **Read these instructions** carefully before switching on the appliance and keep them for future reference. Failure to follow and observe these instructions could lead to an accident.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children unless they are supervised.
- This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.
- Ensure that the fan is switched off from the supply mains before start any installation or assembly operation.
- Disconnect the appliance from

the mains before undertaking any cleaning task. Ensure that the fan is switched off from the supply mains before removing the guard.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similar qualified person in order to avoid a hazard.
- This appliance is for household use only, not professional, industrial use.
- Ensure that the voltage indicated on the rating label matches the mains voltage before plugging in the appliance.
- Connect the appliance to a socket that can supply a minimum of 10 amperes.
- The appliance's plug must fit into the mains socket properly. Do not alter the plug. Do not use plug adaptors.
- The appliance must be used and placed on a flat, stable surface.
- Do not use the appliance if the cable or plug is damaged.
- If any of the appliance casings breaks, immediately disconnect the appliance from the mains to prevent the possibility of an electric shock.
- Do not use the appliance if it has fallen on the floor, if there are visible signs of damage or if it has a leak.
- Do not force the power cord. Never use the power cord to lift up, carry or unplug the appliance.
- Do not wrap the power cord around the appliance
- Do not clip or crease the power cord.
- Check the state of the power cord. Damaged or tangled cables increase the risk of electric shock.
- The appliance is not suitable for outdoor use.

- Do not use or store the appliance outdoors.
- Do not leave the appliance out in the rain or exposed to moisture. If water gets into the appliance, this will increase the risk of electric shock.
- Do not touch the plug with wet hands.
- Do not touch any of the appliance's moving parts while it is operating.

SERVICE:

- Any misuse or failure to follow the instructions for use renders the guarantee and the manufacturer's liability null and void.

ANOMALIES AND REPAIR

- Take the appliance to an authorised technical support service if product is damaged or other problems arise. Do not attempt to disassemble or repair the appliance yourself as this may be dangerous.

FOR EU PRODUCT VERSIONS AND/OR IN CASE THAT IT IS REQUESTED IN YOUR COUNTRY:

ECOLOGY AND RECYCLABILITY OF THE PRODUCT

- The materials of which the packaging of this appliance consists are included in a collection, classification and recycling system. Should you wish to dispose of them, use the appropriate public recycling bins for each type of material.
- The product does not contain concentrations of substances that could be considered harmful to the environment.




This symbol means that in case you wish to dispose of the product once its working life has ended; take it to an authorised waste agent for the selective collection of Waste from Electric and Electronic Equipment (WEEE).

This appliance complies with Directive 2014/35/EU on Low Voltage, Directive 2014/30/EU on Electromagnetic Compatibility, Directive 2011/65/EU on the restrictions of the use of certain hazardous substances in electrical and electronic equipment and Directive 2009/125/EC on the ecodesign requirements for energy-related products.

- The following information details the features related to ecodesign.

| NEW BABEL / NEW BABEL DIGITAL | |
|--------------------------------------|-----------------------------|
| Maximum fan flow rate (F) | 2.3 m ³ /min |
| Fan power input(P) | 39.1 W |
| Service value (SV) | 0.1 (m ³ /min)/W |
| Standby power consumption (PSB) | 0.3 W |
| Seasonal electricity consumption (Q) | 12.8 kWh/a |
| Fan sound power level (LWA) | 55 dB(A) |
| Maximum air velocity(c) | 1.1 metres/sec |

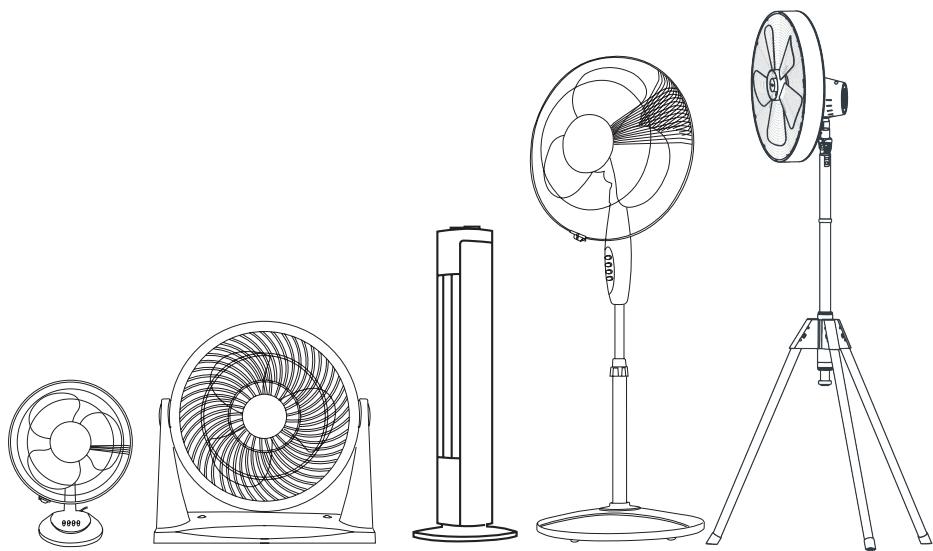

taurus
ALPATEC

Avda. Barcelona, s/n
25790 Oliana
Spain

Ver I A5
Pub. 10 enero, 2022