



Kids Digital Camera

Realikids Cam Mini




USER MANUAL
MANUEL D'UTILISATEUR
BENUTZERHANDBUCH



Descarga el manual de usuario en:
Scarica il manuale utente su:
Töltse le a felhasználói kézikönyvet:
Download de gebruikershandleiding op:
Obtenha o manual do usuário em:
Pobierz instrukcję obsługi na:
Získejte uživatelskou příručku na:
Получить руководство пользователя на:
www.support.agfaphoto-gtc.com

Product overview

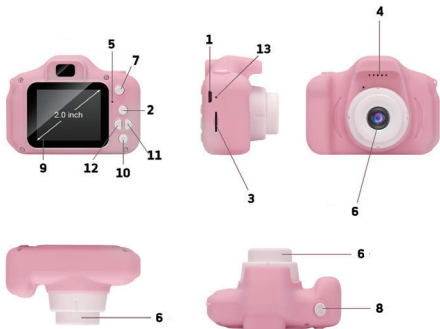

1.USB

4.Speaker

7.Power button

10.Down button

13.Reset button

2.Up button

5.Indicator light

8.Shutter button

11.Mode button

3.SD card slot

6.Lens

9.Screen

12.Menu button

Button function description

1. USB port

With the supplied USB cable, you can connect the camera either to a PC for data transfer or to a power source to recharge its battery.

2. Mode key

Once the camera is on, press this button to successively move from a mode to another: video recording / camera / video playback and photo browsing.

3. SD card slot

Before use, insert an SD card in this slot to save your videos and photos.

4. Speaker

It plays the sound of a video or an audio recording.

5. Microphone

It records the sound of a video or an audio recording.

6. Lens

Viewfinder window.

7. Power button

This button turns the camera on/off and also serves as a charging indicator.

8. Shutter button

1. In video recording mode, short press this button to start recording and press to again to stop it.
2. In camera mode, short press this button to take photos.
3. In settings menu, this button is used to validate each setting change.

9. Screen

Its 2-inch size allows comfortable viewing of video and photo files.

10. Menu button

Short press this button to enter the setting menu and press it again to exit.

11. Up/Down buttons

Use these buttons to move up and down in a list of options.

Basic operation instructions

1. Power on and off

Press a few seconds the power button to turn the camera on, the blue light indicator will then light up once the camera is on. Press this button again to turn the camera off, the blue light indicator will also stop lighting up.

2. Video mode

Short press mode button to switch to video mode then the camera resolution and icon will be displayed in the upper right corner of the screen. Short press the shutter button to start video recording, the recording indicator will then start flashing indicating that the camera is recording.

3. Photo mode

Short press the mode button to switch to the camera mode, then the camera resolution and icon will be displayed in the upper right corner of the screen.

Short press the shutter button to take a picture.

When the picture is taken, the indicator flashes once indicating that the picture is saved.

4. Video photo playback

Short press the mode button to switch to the playback mode, then the playback icon will be displayed in the upper right corner of the screen. Short press the up/down buttons to select a file up or down.

5. Setting menu

Short press menu button to enter the setting menu. By pressing the up/down buttons you can go up and down in each setting item.

Select the setting item that needs to be changed, and confirm the change by short pressing the shutter button.

6. Exit the setup menu

Short press the menu button to exit the setting menu.

USB mode

Connect the USB cable to the computer and the child camera will automatically switch to USB mode.

In this mode, you can read or transfer video or photo files saved on the memory card.

Battery instructions

1. Battery indicator, please refer to the illustration:



Full battery



Lower battery



Low battery



Empty battery

2. There are three ways to charge the battery, please note that the blue charging indicator will light up during charging.

1: Charging with an AC adapter.

2: Charging with a computer.

3: Charging with a USB car charger.

Note: If bug occur during use, remove the battery or press the reset button and then turn the camera on again to return to normal.

Product specifications

Image sensor	GC0308
Display	color display
Lens	fixed lens, 100 degree angle
Storage media	micro SD card, up to 32G
Photo format	JPG
Language	English/French/German/Spanish/Italian/Portuguese/ Dutch/Polish/Czech/Hungarian/Russian
Camera resolution	1080p: 1440x1080/720p: 1280x720/VGA: 640x480
TFT display	2.0 inch screen (720x320)
Loop recording	off/1 minute/3 minutes/5 minutes/10 minutes
Photo resolution	3M/2M/1.3M/VGA
Charging voltage	DC-5V
Support system	Windows me/2000/2003/Win7/XP/Vista; Mac/Linux
Optical frequency	50HZ 60HZ
Version	D600-0164-3703
Game	snake



WARNING! Not suitable for children under 36 months. Small parts and long neck strap. Choking and strangulation hazards.

ATTENTION! Ne convient pas aux enfants de moins de 36 mois. Petits éléments et long tour de cou. Dangers d'étouffement et de strangulation.

ACHTUNG! Nicht für Kinder unter 36 Monaten geeignet. Kleine Teile und langes Umhängeband. Erstickungs- und Strangulierungsgefahr.

¡ATENCIÓN! No conviene para niños menores de 36 meses. Piezas pequeñas y cordón largo. Peligro de asfixia y estrangulamiento.

AVVERTENZ! Non adatto a bambini sotto i 36 mesi. Piccole parti e cordinio al collo lungo. Rischi di soffocamento e strangolamento.

ATENÇÃO! Contra-indicado para crianças com menos de 36 meses. Peças pequenas e correia de pescoço comprida. Riscos de asfixia e estrangulamento.

WAARSCHUWING! Niet geschikt voor kinderen beneden de 36 maanden. Kleine onderdelen en lange lanyard. Gevaar van verstikking en wurging.

OSTRZEŻENIE! Nie nadaje się dla dzieci poniżej 36 miesięcy. Małe części i długi pasek na szyję. Zagrożenie udławieniem i uduszeniem. Ryzyko udławienia i uduszenia.

FIGYELEM! 36 hónaposnál fiatalabb gyermekek számára nem alkalmas. Kis részek és hosszú nyakpánt. Fulladás és fojtogatás veszélye.

VAROVÁNÍ! Není vhodné pro děti do 36 měsíců. Malé části a dlouhý řemínek na krk. Nebezpečí udušení a uškrcení.

ПРЕДУПРЕЖДЕНИЕ! Не подходит для детей до 36 месяцев. Мелкие элементы и длинный шейный ремешок. Опасность удушья и удушения.

1 year limited warranty / garantie limitée un an / 1 Jahr eingeschränkte Garantie / garantía limitada de 1 año / garanzia limitata di 1 anno / garantia limitada de 1 ano / roczna ograniczona gwarancja / 1 év korlátozott garancia / omezená záruka 1 rok / 1 jaar beperkte garantie / 1 год ограниченной гарантии

Made in China



Notice of compliance for the European Union:

products bearing the CE mark comply with the applicable European directives and associated harmonised European standards.



Disposal of waste equipment by users in the European Union:



this symbol means that according to local laws and regulations, it is prohibited to dispose of this product with household waste. Instead, it is your responsibility to protect the environment and human health by handing over your used device to a designated collection point for the recycling of waste electrical and electronic equipment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



After sales service / service après vente / Kundendienst /
servicio postventa / serviço pós venda / servizio post vendita
/ serviço pós venda / serwis posprzedażowy / poprodejní
servis / értékesítés utáni szolgáltatás / dienst na verkoop /
послепродажное обслуживание:

@ :aftersales@agfaphoto-gtc.com
+ 33 (0) 1.85.49.10.26

Product manufactured for and distributed by:

GT COMPANY - 5 rue de la Galmy - 77700 Chessy - France
+33 (0) 1.61.10.09.25 - www.gtcompany.fr

GT COMPANY UK LTD - 11 Old Jewry
EC2R 8DU London - United Kingdom

AgfaPhoto is used under license of Agfa-Gevaert NV. For this product a sublicense has been granted by AgfaPhoto Holding GmbH (www.agfaphoto.com). Neither Agfa-Gevaert NV nor AgfaPhoto Holding GmbH manufacture this product or provide any product warranty or support. For service, support and warranty information, contact the distributor or manufacturer.

