

Instant Print Camera

Realikids Instant Cam



User manual
Manuel d'utilisation
Bedienungsanleitung
Manual de usuario
Manuale d'uso


Manual do usuário
Gebruikershandleiding
Podręcznik użytkownika
Uživatelská příručka
Felhasználói kézikönyv

Руководство пользователя для загрузки на :
www.gtcompany.fr/en/customer-support/

PRODUCT KEY FEATURES

- Instant black and white photo printing
- Photo frames
- 5.0 MP CMOS sensor
- 2.4" HD screen
- Support up to 32 GB micro SD card (not included)

PAPER ROLL INSTALLATION

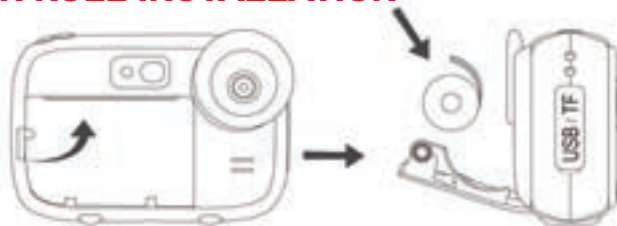


1. Pull the small lever to the left of the paper slot upwards to open the lid.
2. Place the paper roll inside respecting the position shown on the diagram above.
3. Close the lid and press it firmly until it locks in place.
4. While closing the lid, make sure 5 cm of paper comes out of the printing slot.

Note: the first prints may be more or less sharp because the instant camera requires a short warm-up time.

BUTTONS DESCRIPTION

1. Lever of the paper roll slot
2. LED flash
3. Selfie mirror
4. Lens
5. Speaker
6. Paper roll slot
7. Lanyard hole
8. USB/TF slot
9. Lanyard hole
10. Microphone
11. Down button
12. Mode/OK button
13. Indicator light
14. Shutter button
15. Up button
16. Reset hole
17. Screen
18. Settings menu button
19. Frame button
20. Printing button
21. Power button

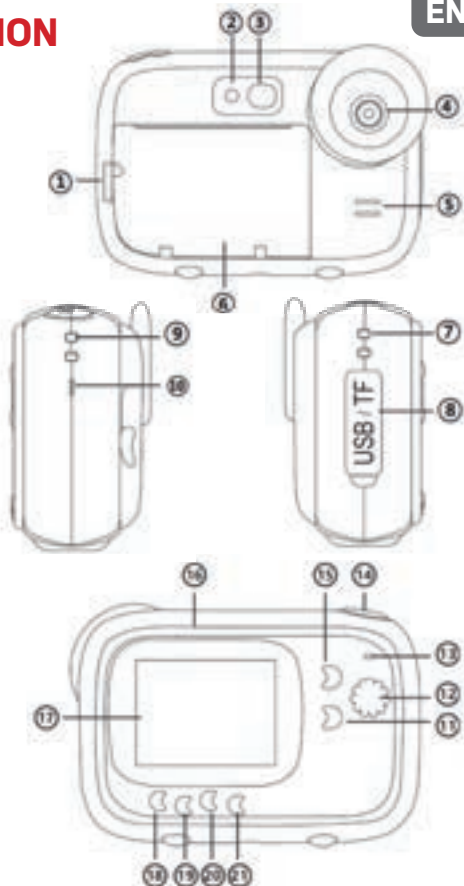

OPERATION GUIDE

Lithium battery charging

To charge the battery, simply connect the instant camera to a computer or an AC adapter with the provided USB cable. The indicator light on the back of the device will light up blue to indicate that the battery is being charged, and will turn off when the instant camera is fully charged.



Photo mode

1. Before using the instant camera, insert a micro SD card in the dedicated slot on the side of the device to extend its storage capacity and save photos you shot to view them in playback mode.

Note: once having inserted a new memory card into the instant camera, please format it before use.

2. After pressing Power button to switch on the device, the instant camera automatically enters the photo mode as it is the default one. The icon  will then show up at the top left of the LCD screen.



3. Before taking photos, you can add a frame or filter by first pressing Frame button and then Up / Down buttons to scroll through the choices. To exit the frame mode, press Frame button again.
4. Press Shutter button to take a picture.
5. The printing function being on by default, the instant camera will then automatically print the photo you just shot.



Printing function

1. When you switch on the instant camera, the printing function is automatically activated in photo mode, as the icon  shows at the top of the screen.



Note: this function can work without a micro SD card has been inserted into the instant camera.

2. Possibly add a frame or a filter by first pressing Frame button and then Up / Down buttons to scroll through the choices.
3. Press Shutter button to take picture.
4. The instant camera will instantly print it.

5. If you do not want to print the photo you have just taken, press Printing button before pressing Shutter button to only take a picture. The icon  no longer shows up at the top of the LCD screen.



Video recording mode

1. After pressing Power button to switch on the device, the instant camera automatically enters the photo mode as it is the default one.
2. Press Mode button until moving to video recording mode. The icon  will then show up at the top left of the LCD screen.



3. Press Shutter button to start video recording.

Note: in video mode, photo printing function is disabled.



Playback mode

1. After pressing Power button to switch on the device, the instant camera automatically enters the photo mode as it is the default one.

2. Press Mode button until moving to playback mode.

The icon  will then show up at the top left of the LCD screen.



3. Press Up / Down buttons to choose the file you want to view.
4. If you selected a photo, you press Print button to print it.
5. If you selected a video, press Shutter button to play it back.

Note: to delete a file, press Menu button in playback mode. The «Delete this file?» question will then show up on the LCD screen with OK / Cancel options. Press Up / Down buttons to make a choice and Mode button to confirm.

Settings menu in the photo / video mode

If you want to adjust some settings of the instant camera, Settings menu button to enter the settings menu.

1. Settings menu button in photo or video mode.
2. Press Up/Down buttons to choose the setting you want to adjust.
3. Press Mode button to enter the submenu.

4. The settings menu looks as follow:

Video Size	HD/FHD
Resolution	1M/2M/3M/5M/8M/10M
Print Density	Density 6/5/4/3/2/1
Fill light	Off/On/Auto
Date Tag	On/Off
Sound	On/Off
Time Setting	Year/Month/Day/Hour/Minute/Second
Language Setting	English/Simplified Chinese/Traditional Chinese/ Japanese/Korean/Russian/French/German/Italian/ Spanish/Czech/Portuguese/Polish/Turkish/Dutch/ Hungarian
Flicker	50Hz/60Hz
Format	OK/Cancel
Reset System	OK/Cancel
Version	P01_V1.0.0

5. Press Up / Down buttons to select a setting option and then Mode button to confirm.

6. Settings menu button to exit the settings menu.



WARNING! Not suitable for children under 36 months. Small parts and long neck strap. Choking and strangulation hazards.

ATTENTION! Ne convient pas aux enfants de moins de 36 mois. Petits éléments et long tour de cou. Dangers d'étouffement et de strangulation.

ACHTUNG! Nicht für Kinder unter 36 Monaten geeignet. Kleine Teile und langes Umhängeband. Erstickungs-und Strangulierungsgefahr.

¡ATENCIÓN! No conviene para niños menores de 36 meses. Piezas pequeñas y cordón largo. Peligro de asfixia y estrangulamiento.

AVVERTENZ! Non adatto a bambini sotto i 36 mesi. Piccole parti e cordino al collo lungo. Rischi di soffocamento e strangolamento.

ATENÇÃO! Contra-indicado para crianças com menos de 36 meses. Peças pequenas e correia de pescoço comprida. Riscos de asfixia e estrangulamento.

WAARSCHUWING! Niet geschikt voor kinderen beneden de 36 maanden. Kleine onderdelen en lange lanyard. Gevaar van verstikking en wurging.

OSTRZEŻENIE! Nie nadaje się dla dzieci poniżej 36 miesięcy. Małe części i długi pasek na szyję. Zagrożenie udławieniem i uduszeniem. Ryzyko udławienia i uduszenia.

FIGYELEM! 36 hónaposnál fiatalabb gyermekek számára nem alkalmas. Kis részek és hosszú nyakpánt. Fulladás és fojtogatás veszélye.

VAROVÁNÍ! Není vhodné pro děti do 36 měsíců. Malé části a dlouhý řemínek na krk. Nebezpečí udušení a uškrcení.

ПРЕДУПРЕЖДЕНИЕ! Не подходит для детей до 36 месяцев. Мелкие элементы и длинный шейный ремешок. Опасность удушья и удушения.

1 year limited warranty / garantie limitée un an / 1 Jahr eingeschränkte Garantie / garantía limitada de 1 año / garanzia limitata di 1 anno / garantia limitada de 1 ano / roczna ograniczona gwarancja / 1 év korlátozott garancia / omezená záruka 1 rok / 1 jaar beperkte garantie / 1 год ограниченной гарантии

Made in China



Notice of compliance for the European Union:

products bearing the CE mark comply with the applicable European directives and associated harmonised European standards.



Disposal of waste equipment by users in the European Union:



this symbol means that according to local laws and regulations, it is prohibited to dispose of this product with household waste. Instead, it is your responsibility to protect the environment and human health by handing over your used device to a designated collection point for the recycling of waste electrical and electronic equipment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



After sales service / service après vente / Kundendienst /
servicio postventa / serviço pós venda / servizio post vendita
/ serviço pós venda / serwis posprzedażowy / poprodejní
servis / értékesítés utáni szolgáltatás / dienst na verkoop /
послепродажное обслуживание:

@ : aftersaleservice@gtcompany.fr
+ 33 (0) 1.85.49.10.26

Product manufactured for and distributed by:

GT COMPANY - 5 rue de la Galmy - 77700 Chessy - France
+33 (0) 1.61.10.09.25 - www.gtcompany.fr

AgfaPhoto is used under license of Agfa-Gevaert NV. For this product a sublicense has been granted by AgfaPhoto Holding GmbH (www.agfaphoto.com). Neither Agfa-Gevaert NV nor AgfaPhoto Holding GmbH manufacture this product or provide any product warranty or support. For service, support and warranty information, contact the distributor or manufacturer.

Thermal paper compatible / Compatible avec le papier thermique
Thermopapier kompatibel / Compatible con papel térmico
Compatibile con carta termica / Compatível com papel térmico /
Compatibel met thermisch papier / Kompatybilny z papierem
termicznym / Termikus papír kompatibilis / Kompatibilní
s termálním papírem / Термобумага совместима:

АТР3WH

- [3 rolls of 57x30mm white thermal paper]
- [3 rouleaux de papier thermique blanc 57x30mm]
- [3 Rollen weißes Thermopapier 57 x 30 mm]
- [3 rollos de papel térmico blanco de 57x30 mm]
- [3 rotoli di carta termica bianca 57x30mm]
- [3 rolos de papel térmico branco 57x30mm]
- [3 rollen wit thermisch papier 57x30mm]
- [3 rolki białego papieru termicznego 57x30mm]
- [3 tekercs 57x30mm fehér hőpapír]
- [3 role bílého termálního papíru 57x30 mm]
- [3 рулона белой термобумаги 57x30 мм]