





MIZAR WIRELESS CONTROLLER

USER MANUAL

FEATURES

- Bluetooth® Wireless connection
- All button features available
- Including touchpad, vibration and sensor functions
- Built-in dual motors and high precision 3D axis
- RGB LEDs backlight under analogues & 4 buttons
- Also compatible with PS5™ (for PS4™ games only)
- Also compatible with PS3™ console

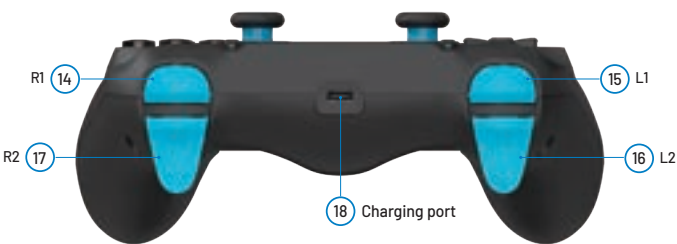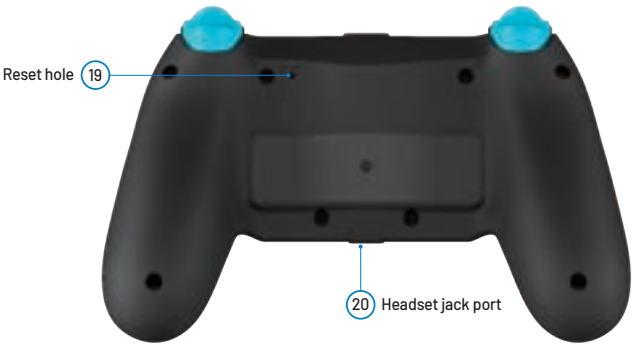

FUNCTIONS

Number	Name	Function
1	Share	Screenshot, record video
2	Touchpad	Action - activates an in-game command (depending on the game settings)
3	Options	Select & Pause
4/5/6/7	Square / Triangle / Circle / Cross	Action - activates an in-game command (depending on game's settings)
8	Right analog joystick / R3	Directional joystick / action - activates an in-game command when pressed down (depending on game's settings)
9	Speaker	Speaker
10	Home button	Controller power button / activate controller / back to console's main menu
11	Light bar	Power indicator / in-game light bar status indicator (depending on game's settings)
12	Left analog joystick / L3	Directional joystick - activates an in-game command when pressed down (depending on game's settings)
13	D-pad	8-position directional action button - activates in-game commands (depending on game's settings)
14/15/16/17	R1 / L1 / L2 / R2	Action - activates an in-game command (depending on game's settings)
18	Charging port	Type-C and firmware update port
19	Reset hole	Allows to reset the controller
20	Headset jack port	3.5mm jack port, play& chat

PAIRING STEPS

For PS4™

- 1 Please connect the controller and PS4™ console by the provided Type-C cable, once plugged in, all LEDs light up on the controller.
- 2 Wait for 3-5 seconds, please unplug the cable to disconnect controller and console.
- 3 Press Home button on the controller, now controller connects with console wirelessly.
- 4 After the first-time connection through cable, press Home button to activate console.

For Mobile / PC Bluetooth - Please check game support before use.

- 1 While controller powered OFF, hold the Share + Home buttons, release when the LED flashes on the light bar and the controller is now in pairing mode. When the wireless controller appears in the list of Bluetooth devices, select it.
- 2 Once connected to the device, the LED on the light bar will stop flashing and all LEDs will light up.

For PC connection via USB Wired – (Preferred Mode) D-input Plug & Play

- 1 Please connect the controller and PC by the provided Type-C cable, now orange LED lights up for 2 – 3 seconds on the light bar. Once connected, all LEDs light up.
- 2 The Controller will now be recognized as a D-input controller device.

*Note: While playing, the light will turn off when fully charge

FIRMWARE UPDATE

- Firmware update instruction available on www.dragonshock.com
- Find and select DS4 Wireless Controller
- Click 'Download' and follow the instructions on the screen

LIGHT BAR LED INDICATION

Players

Press Home button to identify players
Blue for Player 1 / Red for Player 2 / Green for Player 3 / Purple for Player 4

Charging

When controller is off, the light bar illuminates in orange and slowly pulsing.
When play and charge, the light bar illuminates solid blue.
Once fully charged, LED off.

SPECIFICATION

Type-C charging cable	2m
Wireless connection	Bluetooth5.0
Bluetooth transmission distance	≤ 8m
Battery type	Li-ion
Battery capacity	620mAh
Charging hour	3-4hours
Play hour	6hours

Input power rating	DC5V/ 200mA
Voltage	DC3.6V -- 4.2V
Operating temperature	0---45C
Radio frequency	ISM2.4G
Frequency band	2402---2480MHZ
Maximum radio-frequency	0dbm
Mass	Approx. 208g