

3	8. Knurled ring		LCD Display		
4	Line In				
	A				
	IMPORTANT 1. The BY-WXLR8 2. Do not set the is being input f audio input, res damage to play	① Channel Gr Long press			
5	5. LCD display For more details, on page 30.	please refer to "LCD Display Operation Guide"	2 Channel nu		
é	Press these but	/ – (- selection) buttons tons to set the transmission channel, or el of the input signal.			
7	7. SET button Press to change For details, pleas and MONO" on p	④ Mute On			
	<ol> <li>Battery compa Accommodates t</li> </ol>	rtment wo AA batteries.			
ç	9. Power/Mute b	utton			
	Function	Operation			
	Power ON	Long press button			
	Power OFF	Long press button until it turns off	⑤ LCD will be		
	Mute ON	Short press button	Long press		
	Mute OFF				
			1		

29		
29		
29	~~	
	29	

