

Inception connect BS2802CD



Báscula de baño Instrucciones de uso

Bathroom Scale Instructions for use

Pèse-personne Mode d'emploi

Badwaage Gebrauchsanleitung

Bilancia Pesapersona Istruzioni per l'uso

Balança de banho Instruções de uso

Bàscula de bany Instruccions d'ús

Badkamerweegschaal Gebruiksaanwijzing

Waga łazienkowa Instrukcja obsługi

Ζυγαριά μπάνιου Οδηγίες χρήσης


Весы для ванной комнаты Инструкция по применению

Cântar de baie Instrucțiuni de utilizare

Электронен кантар Инструкция за употреба

میزان حمام

taurus

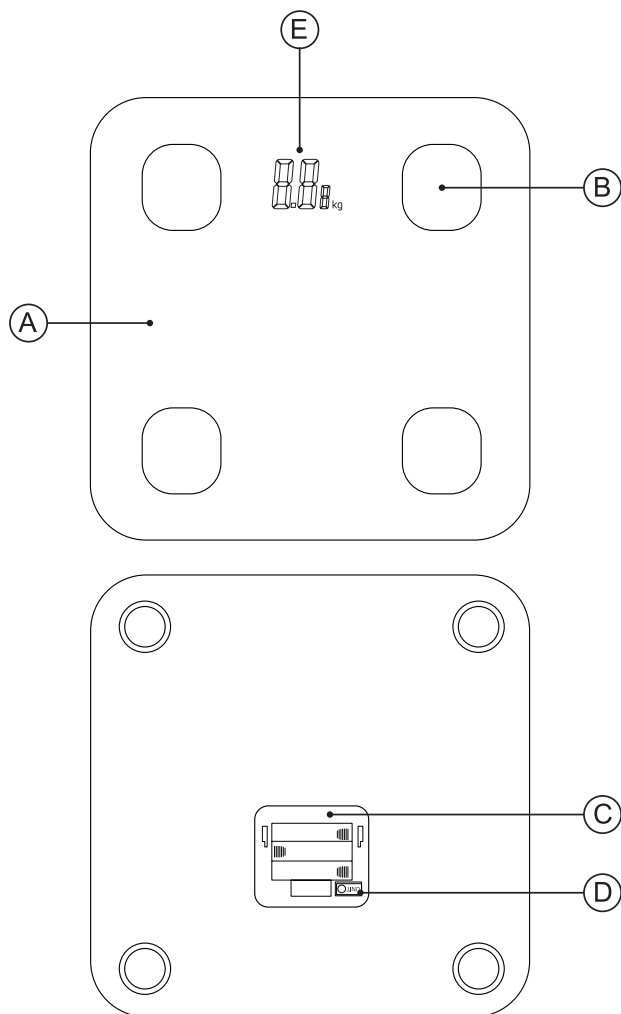

English

Bathroom Scale Inception Connect

DESCRIPTION

- | | |
|---|-----------------------------|
| A | Platform |
| B | Electrodes |
| C | Battery compartment cover |
| D | Weight unit selector button |
| E | LCD screen |

- If the model of your appliance does not have the accessories described above, they can be purchased separately from the Technical Assistance Service.

UTILIZACIÓN Y CUIDADOS:

- Do not overload the appliance's weight capacity.
- Remove the batteries from the appliance if you are not going to use it for some time.
- This appliance is for household use only, not professional or industrial use.
- This section is not valid for business transactions
- Store this appliance out of reach of children and/or those with reduced physical, sensorial or mental abilities or who are unfamiliar with its use
- When the batteries are not in use, keep it away from other metal objects like paper clips, coins, keys, screws ... that could connect a terminal to another.
- Do not short-circuit the battery terminals as this may cause an explosion or fire.
- The batteries should be stored at a temperature of below 40°C.
- **CAUTION:** Do not use the appliance if the glass is cracked or broken.
- Use the device only with the batteries for which it has been specifically designed. The use of any other battery may cause an explosion or fire hazard.

FITTING THE BATTERY/ (IES)

- **CAUTION:** During the handling of batteries, do

not touch both poles at the same time, as this will provoke the partial discharge of the stocked energy therefore affecting longevity.

- Remove the cover of the battery compartment.
- Check that the plastic covering that protects the battery has been removed (some batteries are sold with a protective covering).
- Put the battery in its compartment, respecting the polarity.
- Close the cover of the battery compartment.
- It is essential that the batteries should always be the same kind and the same charge. Never mix alkaline batteries with normal one (Carbon-Zinc) and/or rechargeable ones.

USE

BEFORE USE:

- Make sure that all the product's packaging material has been removed.

WIFI CONNECTION & DOWNLOADING THE APP:

- To use the Inception Connect scales wherever you choose, first download the Taurus App

SETUP:

- Downloaded the Taurus App from the App Store or Google Play.
- Sign up using your email address and password.
- Confirm registration using the verification code that will be sent to your email account.
- Create your home, name your home, establish the geographical location and select the room where you are going to place the smart device.
- Add Inception Connect by following the steps described in THE QUICK GUIDE.
- To connect Inception Connect to WiFi, switch on the scales.

IMPORTANT: Only 2.4GHz Wi-Fi networks are supported.

- IF THE CONNECTION FAILS, CHECK THESE POSSIBLE CAUSES:

- Inception Connect is within range of the router.
- The Wi-Fi password is incorrect
- The Wi-Fi network is not 2.4GHz

(Original instructions)

WEIGHT UNIT SELECTOR:

- Kg/Lb/St
- The device has a weight unit selector, set the selector to the position that corresponds to the type of units you want to work with. To do this, press the "unit" button repeatedly until the selected measuring unit appears on the screen.

USE:

- Switch the device on by pressing lightly on the weighing platform and wait until 0,0 appears on the display
- Stand in the centre of the platform avoiding any abrupt movements, keep still and do not touch other objects, until the appliance displays your weight.
- So as to avoid inaccuracies in the measurements taken due to electro-magnetic interference between electronic devices, do not use this appliance near other devices such as mobile telephones or microwave ovens.

AUTO-DISCONNECTION FUNCTION (STANDBY):

- For the purpose of saving energy, the appliance switches to auto-off mode (stand-by) after 12 seconds, assuming the user has not performed any action on it during this period.
- To return to normal operation, simply press down lightly on the weighing platform and wait until 0,0 appears on the display

ONCE YOU HAVE FINISHED USING THE APPLIANCE:

- Remove the batteries from the appliance if you are not going to use it for some time.
- Clean the appliance

SPECIAL MESSAGES:

THE FOLLOWING MESSAGES MAY APPEAR ON THE SCREEN:

- Err: means that the appliance's capacity has been exceeded.
- Lo: means that the batteries have to be changed/recharged.
- C: An error has occurred during the measurement. Step off the scales and then step back on them again.

CLEANING

- Clean the appliance using a damp cloth with a few drops of detergent and then dry it.
- Do not use solvents, or products with an acid or base pH such as bleach, or abrasive products, for cleaning the appliance.
- Do not let water or any other liquid get into the air vents to avoid damage to the inner parts of the appliance.
- Do not immerse the appliance in water or any other liquid, or place it under a running tap.

SUPPLIES

- Always use original supplies, designed specifically for your appliance model.
- Only the following type of supplies must be used with the appliance.
- Batteries of type: 3X AAA
- These supplies are available in specialist shops.

taurus

Avda. Barcelona, s/n
25790 Oliana
Spain

11/11/2021